


- Set the indicators at the desired attitude to the workpiece

**Code**

**6297-1**



## DIAL TEST INDICATOR UNIVERSAL HOLDER

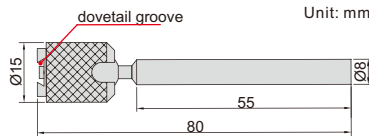

**6297-1**